

acaia

GET STARTED

QUICK START GUIDE

TURN ON/OFF



 
1. [Press] ϕ to **turn on** the scale.
2. [Double Tap] ϕ to **turn off** the scale.

TARE WEIGHT



- [Double Tap] T to **tare/zero** the weight.

SWITCH MODE

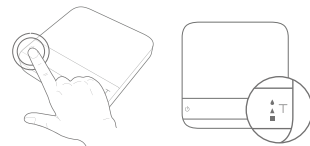

- [Long Press] ϕ to **switch modes**.

- Weighing Only Mode
- Dual Display Mode
- Timer Starts with Flow Mode \blacktriangledown
- Auto-Tare Timer Starts with Flow Mode $\blacktriangledown \blacksquare$
- Auto-Tare Auto-Start Timer Mode $\blacktriangle \blacksquare$
- Auto-Tare Mode \blacksquare

* To view the **full** instructions on how each mode operates, please visit our [manual online](https://acaia.co/manual).

Please follow our online manual to enable/disable modes
acaia.co/manual

PROTECTIVE STRIPS FOR ACAIA LUNAR

Package Contents:

Non-slip Protective Strip x 2

Friction-reduction Protective Strip x 2

Purpose

 
The non-slip protective strip keeps the Lunar more stationary on the drip tray.
The friction-reduction protective strip allows the Lunar to slide easily on top of the drip tray.

Tips

1. Application of the protective strips is optional.
2. Clean the area where you will place the protective strips with rubbing alcohol.
3. Make sure the bottom of the scale is completely dry and free of dust before application.
4. Recommended strip placement is about 3 mm from scale edges.

APPLICATION INSTRUCTIONS


- 1 Turn the scale over.

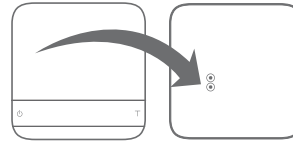


- 2 Clean the bottom of the Lunar and let dry.



 - 3 Remove the adhesive backing.

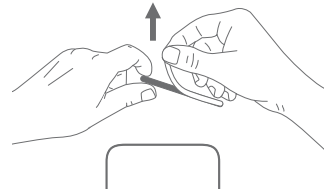

 - 4 Position each protective strip at the bottom of the Lunar and press firmly.

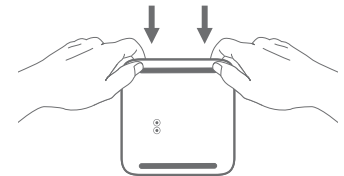

* 3 mm from scale edges