


## CALIBRATING YOUR ACAIA SCALE

The calibration procedure is designed for users to calibrate the Acaia scale periodically to maintain the best weighing accuracy. Acaia calibration weights are built to F2 class equivalent standards ( $\pm 0.0075$  grams) in our own facility.

acaia

## SMART CALIBRATION STEPS

- 1 Turn on the Acaia scale. Make sure the scale is in weighing only mode and is set to grams. Rapidly tap the "T" button until "CAL" is displayed.
- 2 Place the 500 gram weight in the middle of the scale and wait until "\_END\_" is displayed. Calibration is now complete.

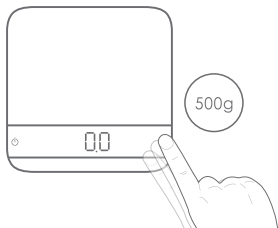

Need help? Contact us at [support@acaia.co](mailto:support@acaia.co)