

UMBRA

GET STARTED



Congratulations on becoming the proud owner of the Umbra.

Designed to bring efficiency and precision to your espresso workflow, the Umbra features Acaia's proprietary industrial weighing technology for fast, responsive, and highly accurate measurements. Its sleek, display-free design integrates seamlessly into commercial environments, helping you maintain a clean, streamlined setup.

The Umbra's Magic Relay communicates in real time with other Acaia devices, such as the Pearl and Lunar, sharing displays and delivering synchronized real-time measurements.

This Quick Start Guide walks you through the essential setup and features, from basic operation to advanced integrations. Use the Umbra as a standalone scale via the Acaia app or connect it with other Acaia devices to unlock more possibilities.

Take your coffee bar to the next level with the Umbra—built for precision, efficiency, and seamless integration.


Inside the Package



Acaia Umbra




Heat Resistant Pad



**USB Type-C
Charger Cable**




**Acaia Calibration
Weight 100 g**



Protective Strip

Non-slip Protective Strip x 2
Friction-reduction Protective Strip x 2

Umbra Overview

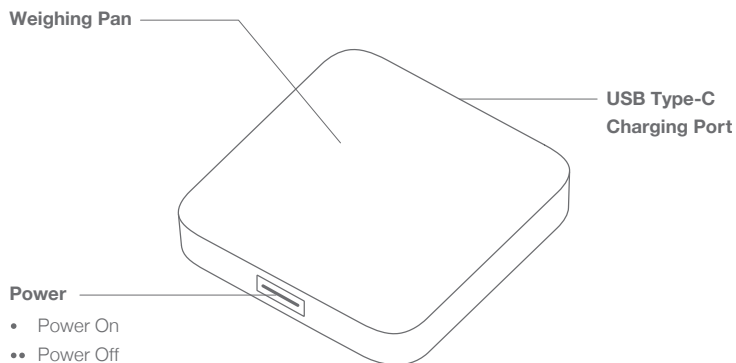

Pair / Unpair / Reset / Update

- Switch Function


Tare

- Tare / Zero the Umbra weight

Action

- Tap
- Double Tap
- Press and Hold

Action Button

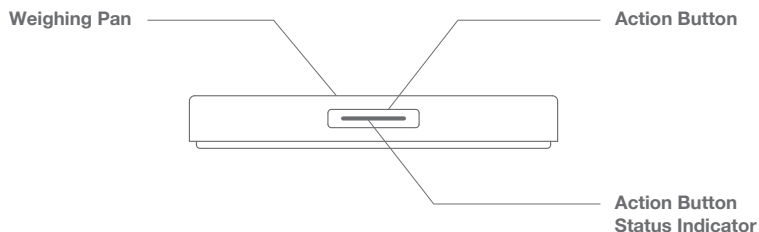

Complete list of functions:

- **Power On / Off**

Tap to turn on. Double tap to turn off.

- **Reset to Default** —

Press and hold for 15 seconds while the Umbra is off, and release when the LED turns Green.

- **Firmware Update** —

Press and hold for 30 seconds while the Umbra is off, and release when the LED turns from Green to Red.

- **Tare**

Tap the Action Button.

- **Pair**

Press and hold for 10 seconds until the LED starts blinking Magenta.

- **Unpair**


Press and hold for 10 seconds until the LED changes from blinking Blue to blinking Magenta.

Action Button Indicators

	Magenta	Unpaired / Pairing in progress
	Blue	Paired but disconnected / Sleep Mode
	White	Pairing successful / Weighing on the Umbra
	Green	Weighing on the paired device with battery level is above 30% / Charging Status: battery fully charged / Reset to factory default
	Yellow	Weighing on the paired device with battery level is below 30% / Charging Status: charging in progress / Blinks when battery level is below 15%, then powers off
	Cyan	Calibration Mode
	Red	Warning / Firmware Update Mode


Using Your Umbra

Power On

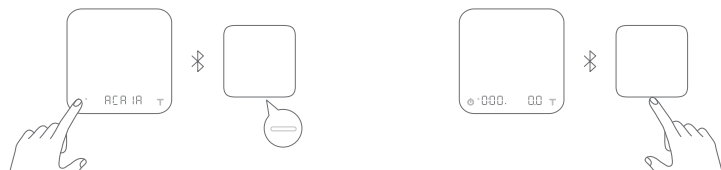


Turn on the paired device, it will wake the Umbra automatically if it's in Sleep Mode. Turn on the Umbra, it will automatically connect with the paired device.

Control

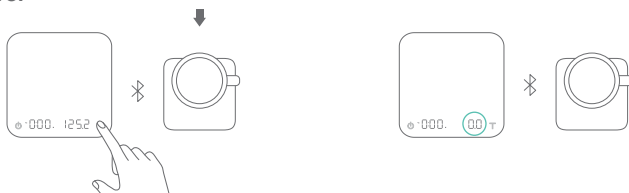

The control is now shared with the paired device. Tare, Start, Stop, and Mode Changes, etc.

Tap to Switch

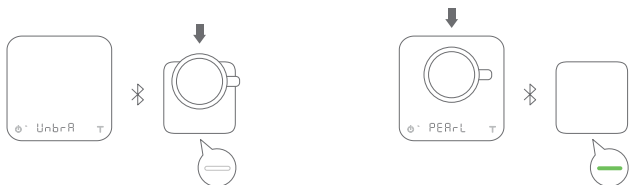

The Magic Relay allows you to tap to switch between the Umbra and the paired device.


Umbra Modes

To operate the Umbra, press and hold the Power Button on your paired device to switch between:

Action

- Tap
- Double Tap
- Press and Hold

Weight Only Mode




- Tare the Umbra
- Tare the device, the Umbra
- Toggle between Single Weight and Dual Weight Display

Timer and Weight Mode




- Start and stop the timer
- Tare the device, the Umbra
- Reset the timer and the weight

Auto Mode with Flow Detection

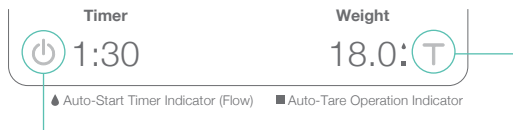

- Start and stop the timer
- Tare the device, the Umbra
- Reset the timer and the weight
- Toggle between 🚰 and 🚰■ mode




Connecting Your Umbra


Pairing with Acaia devices for the First Time




Make sure both the Umbra and the device to be paired are using the latest firmware via the Acaia Updater App.

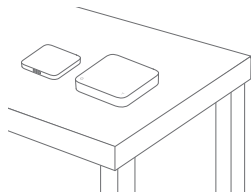


Place the Umbra and other Acaia devices on a stable, vibration-free, and preferably level surface.

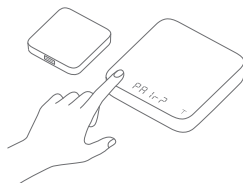


When the device is off, press and hold the Power Button for 10 seconds until the LED displays 'PAIR?'.

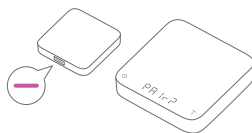


Turn on the Umbra and the button should be solid Magenta. Press and hold the Button for about 10 seconds and release the button when it turns to blinking Magenta.

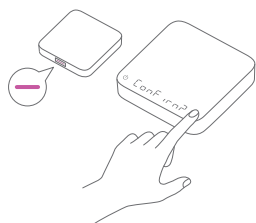

When the device displays '**ConFirm?**', tap Tare Button on the device to confirm pairing.

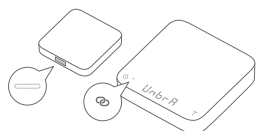

When the Umbra turns solid White and the Bluetooth Connection Indicator appears, pairing is complete.

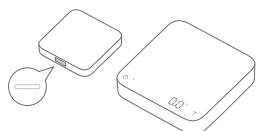

You will only need to pair the Umbra once. The Umbra will automatically connect with the paired device each time it is powered on.



Note: If the Umbra is disconnected with the paired device, the Umbra turns blinking Blue.

Advanced Control with the Brewmaster App

The updated Brewmaster App provides enhanced control for the Umbra. You can connect the app to the Umbra to use it as an extended display and configure basic settings.



Scan the QR Code or visit acaia.co/apps.

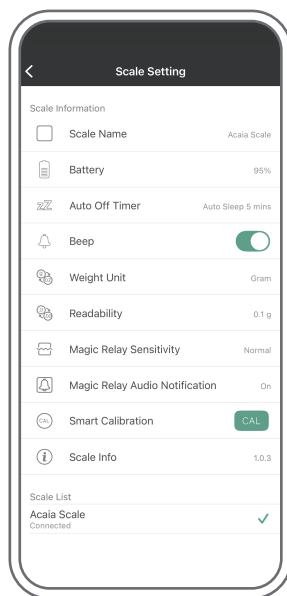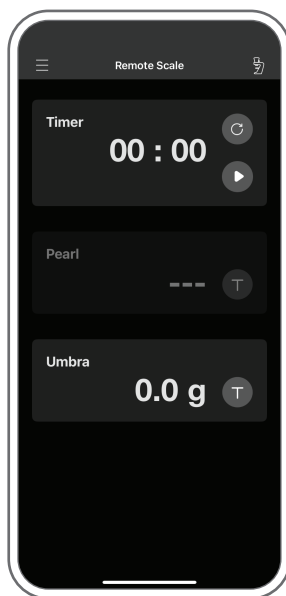

Note: Please refer to page 18 of the Umbra Manual for further connection information.

Compatible Acaia Devices

Umbra is compatible with the following Acaia devices.
Additional device support will be available soon. Please update to the latest firmware for full compatibility.



Lunar

AL008 / AL009 / AL010 /
AL012 / AL013



Pearl

AP007 / AP008 / AP009




Pearl S

PS003 / PS004

Note: Please refer to page 13 of the Umbra Manual for further information.

Battery Charging

You can charge the battery by plugging the USB Type-C cable into any of the power supplies listed below:

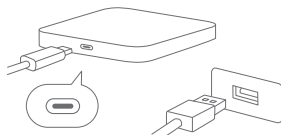

- A computer
- A USB wall-charger with an output of 5 volts and 1 amp
- A USB-C PD charger supporting 5 volts
- A DC car-charger with an output of 5 volts and 1 amp

A fully charged battery can work continuously for about 40 - 48 hours in Standard Mode. It takes about 1 - 2 hours to fully charge. To maintain optimal battery health, avoid waiting until the battery is critically low before charging.

Charging Status


 **Green** Battery fully charged

 **Yellow** Charging in progress

Applying the Protective Strips

The non-slip protective strips keep the Umbra more stationary on the drip tray. The friction-reduction protective strips keep the Umbra from sliding easily on the drip tray.


- 1** Turn the scale over.



- 2** Clean the area where you will place the protective strips with rubbing alcohol. Make sure the scale is completely dry and free of dust.



- 3** Remove the protective strips adhesive backing.

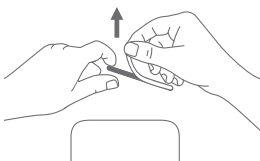

- 4** Position the protective strips along the top and bottom edges* of the Umbra and press firmly.



* 3 mm from scale edges

Smart Calibration

The Smart Calibration must be performed using the Brewmaster App. Follow the steps below to calibrate your Umbra. Please refer to page 18 of the Umbra Manual.

Caution

- Do not charge when the scale is wet.
- Do not place hot objects directly on the weighing pan. Use a heat resistant pad.
- Any modification made without the consent of the manufacturer may result in damage to the scale.
- Avoid using the scale near very strong magnetic fields.

Unpairing the Umbra

To pair the Umbra with another device, unpair it first.

Press and hold the Action Button for about 10 seconds while the Umbra is on. Release the button when the LED changes from blinking Blue  to blinking Magenta .

Reset to Factory Default

To reset the Umbra to factory default, press and hold the Action Button in the front while the Umbra is off. Hold for about 15 seconds and release the Action Button when the button turns Green . Once released, all settings of the Umbra will be reset to factory default, except for the pairing.

Enter the Umbra Firmware Update Mode

To enter the Umbra Firmware Update Mode, please disconnect the Umbra with the paired devices and apps first. Press and hold the Action Button while the Umbra is off. Hold for about 30 seconds and release the Action Button when it turns from Green  to Red . Once released, the Umbra will enter the Firmware Update Mode.

Note: If Umbra turns Magenta after the Green, please fully charge the Umbra before proceeding with the update.

2-Year Limited Warranty

Acaia products purchased in the US have a limited 2-year warranty. This warranty covers all defects in materials and workmanship (parts and labor). It includes free ground transportation to and from our US repair facility. It does not apply to damage that results from improper use, lack of cleaning, abuse, or normal wear and tear. Purchases from unauthorized dealers will not be covered by warranty.

E-mail us at support@acaia.co if you need any assistance. Acaia will contact you to assess the issue and offer the best route for repair.

Register online at acaia.co/product-registration

Acaia products purchased in the US but used in a different country:
The customer must contact the original vendor for repairs or services when necessary. The customer is responsible for any fees associated with parts or product replacement, such as international freight charges and duties. Outside of warranty coverage, the customer is also responsible for labor fees.

Acaia products purchased from international resellers outside the US:
Warranty and after-sales support will be at the discretion of the international reseller.

Acaia products purchased from a reseller not in the country of residence:
The customer is responsible for any fees associated with shipping and/or repair services, such as international freight charges and duties for product/part replacement.

Acaia Corporation, USA, guarantees the high-quality workmanship of Acaia trademarked products.

Find Help in Your Language

Find the Umbra User Manual online in English,
繁體中文, 简体中文, 日本語, Italiano, Deutsch, Français,
and Español or visit our help center at **help.acaia.co**



[acaia.co/pages/
umbra-manuals](https://acaia.co/pages/umbra-manuals)

acaia

Need help? Contact us at support@acaia.co