







acaia



## **Acaia Lunar User Manual**

**AL001 / AL006 / AL007**

# Contents


<b>3</b>	<b>In the Box</b>
3	Introduction
3	Scale Overview
<b>4</b>	<b>Getting Started</b>
4	Placement
4	Power On/Off
4	Tare Weight
4	Switch Mode
<b>5</b>	<b>Product Care Information</b>
5	Battery Charge
5	Battery Level Indicator
5	Calibration
5	Care and Cleaning
<b>6</b>	<b>Tare Save</b>
<b>7</b>	<b>Mode Introduction</b>
7	Mode 1 - Weighing Mode
7	Mode 2 - Dual Display Mode
8	Mode 3 - Timer Starts with Flow Mode (  )
9	Mode 4 - Auto-Tare Timer Starts with Flow Mode (   )
10	Mode 5 - Auto-Tare Auto-Start Timer Mode (   )
11	Mode 6 - Auto-Tare Mode (  )
<b>13</b>	<b>Configuration</b>
<b>17</b>	<b>Appendix</b>
17	Buttons
18	LED Indicators
19	Error Codes
19	Other
<b>20</b>	<b>Specifications</b>

# In the Box


---

## Introduction


Thank you for choosing our scale. The Acaia Lunar is designed and manufactured to the most rigorous standard to give you the best coffee brewing experience. Start by checking that your Acaia Lunar box contains all the parts listed below:

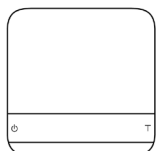

**Acaia Lunar**

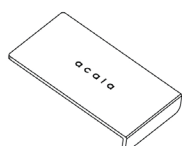

**Heat Resistant Pad**



**Micro USB Cable**




**Acaia Calibration  
Weight 100 g**

Next, follow the instructions in Getting Started to begin using your scale. To take full advantage of the Lunar's many features, carefully read through the manual, which contains step-by-step procedures, examples, and other information.

**Warning: Incorrect handling of this product could result in personal injury or physical damage.**

## Scale Overview

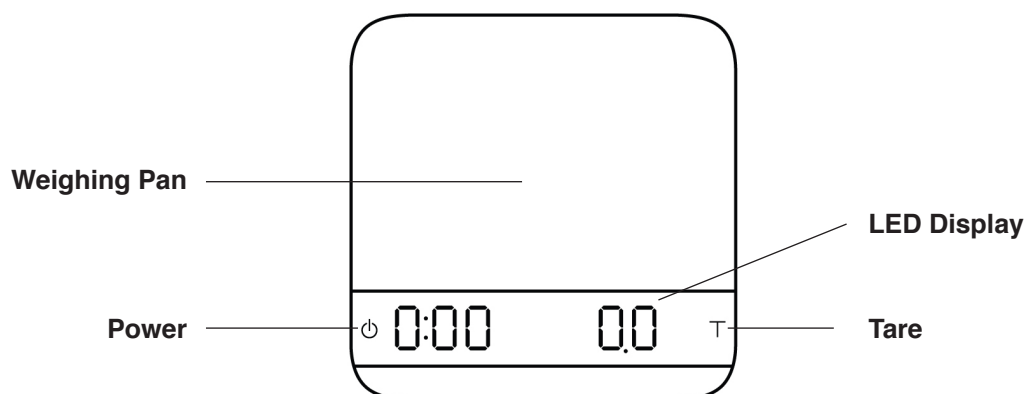


**\*Note: For the best performance, place the weight in the center of the weighing pan.**

# Getting Started


---

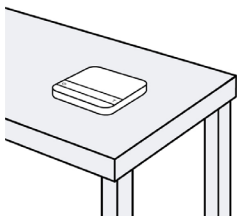

## Placement




Place the scale on a stable and vibration-free surface at a preferably horizontal location.
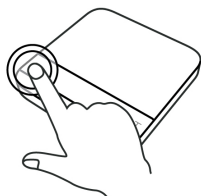
## Power On/Off




[Press]  to turn on the scale.  
[Double tap]  to turn off the scale.

## Tare Weight

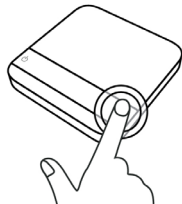

[Press]  to tare/zero the weight.

## Switch Mode

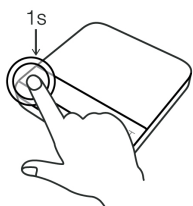

[Press and hold]  to switch modes.


\* Please see the “Mode Introduction” section for more details.

# Product Care Information

---

## Battery Charge

- You can charge the battery by plugging the USB cable into any of the power supplies listed below:
  - A computer
  - A USB wall-charger with an output of 5 volts and 1 amp
  - A DC car-charger with an output of 5 volts and 1 amp
- It takes about 1-2 hours to fully charge the battery from empty. Try not to let the battery completely run out before charging. Charge the battery as needed.
- To check remaining battery level, see below for Battery Level Indicator.

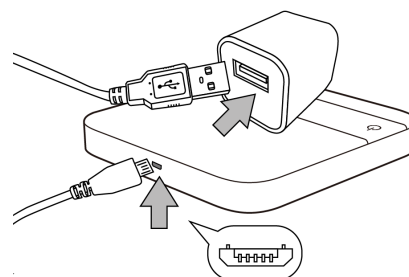


## Battery Level Indicator




- Remaining battery level can be viewed by pressing and holding the power button while the scale is powered off, until battery level indicator is displayed.
- You can also check the battery level by connecting the scale to Acaia Apps.

## Calibration

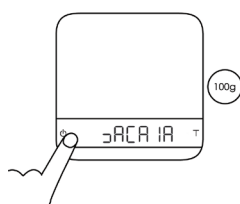


### Turn on scale

Turn on the Acaia scale.

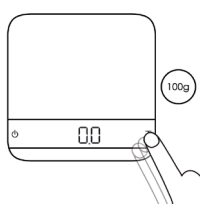


### Tap T button

Make sure the scale is in weighing mode and the unit is set to 'gram', then tap the 'T' button rapidly.

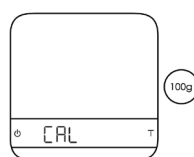

### See CAL display

Keep tapping the 'T' button until 'CAL' is shown on the display.

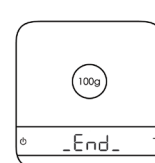

### Place a weight

Place a weight (100 g/500 g/1000 g) on the scale and wait until the display shows '\_End\_'. Calibration is now complete!


## Care and Cleaning

- Use a soft cloth with warm water only to clean the product.
- Do not use detergent or other chemicals for cleaning and soaking as it can damage the anodized coating on the product.


# Tare Save

If you have a frequently used container in your weighing workflow, you can save the weight of the container using the Tare Save function. This will allow you to weigh the container with contents, then trigger Tare Save to deduct the container weight and obtain the net weight. The Tare Save function can be activated in Weighing mode and Dual Display Mode.

## Save Container Weight


- 


1 Place a container on the scale.
- 


2 Press and hold Tare button for 2 seconds when reading is stable. The weight is stored as a preset container weight.
- 

3 You may continue using your scale.

## Tare Container Weight Using Tare Save

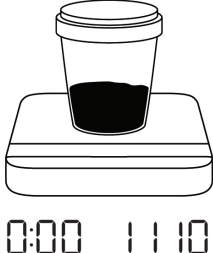- 

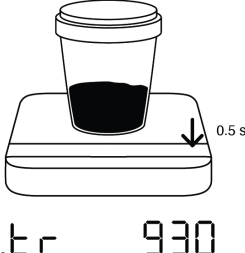1 Place a container along with its contents on the scale.
- 

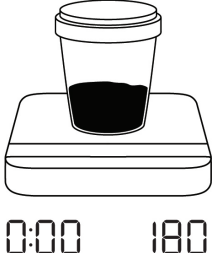2 Press and hold Tare button for 0.5 second. The scale will display the weight to be deducted.
- 


3 The net weight is displayed on the scale.

- To save a new container weight, place the desired container on the scale, then press and hold Tare button for 2 seconds. This will register a new preset container weight.
- It is only allowed to tare container weight once, if you press and hold Tare button for 0.5 second again, the scale will display [ CUP ] and the preset container weight, but the container weight will not be tared again.

Action	Operation
Save Container Weight	Press and hold Tare button for 2 seconds
Subtract Container Weight	Press and hold Tare button for 0.5 second

# Mode Introduction

## Mode 1 - Weighing Mode

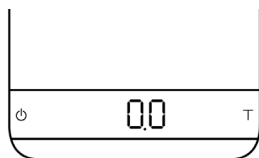

In the Weighing Mode, the scale will only display weight, in either grams or ounces.


- There are two different weighing units in Weighing Mode: gram and ounce. A dot will appear in the upper right of the LED display and the scale will read 0.000 when weighing in ounces.
- The LED display shows [ 0.0 ] when the scale is measuring in grams.
- The LED display shows [ 0.000 ] when the scale is measuring in ounces.
- The readability is 0.1 g or 0.002 oz. For high resolution mode, the readability is 0.01 g or 0.0005 oz.
- The Tare Save function is supported in this mode.

Action	Operation
Tare Weight	Tap Tare button
Switch Mode	Press and hold Power button

### Note :

To change the weighing unit to either gram or ounce, please see Default Unit Setting in the Configuration section (p12).

## Mode 2 - Dual Display Mode

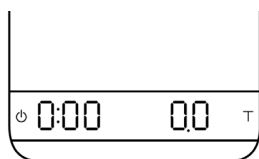


In the Dual Display Mode, the scale displays [ 0:00 0.0 ] with a timer (left) and weight (right).

- There are two different weighing units in Dual Display Mode: gram and ounce.
- When the scale is measuring in grams, the LED display shows [ 0:00 0.0 ].
- When the scale is measuring in ounces, the LED display shows [ 0:00 0.00 ].
- The maximum time that can be displayed is 9 minutes and 59 seconds. When the limit is reached, the timer still goes up to until 999 minutes and 59 seconds. It can be observed through our iOS/Android App.
- The Tare Save function is supported in this mode.

Action	Operation
Start/Stop/Reset Timer	Tap Power button
Tare Weight	Tap Tare button
Switch Mode	Press and hold Power button

## Mode 3 - Timer Starts with Flow Mode (💧) - Droplet

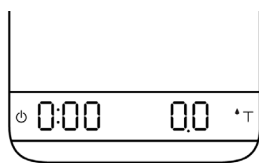

When the scale detects the flow of espresso, the timer starts. The timer will stop when the flow stops.


\*Please note: The flow detection mode is designed to detect the slow trickle of a shot of espresso. The timer may not trigger when attempting to pour from a kettle.

### Display


- The LED display shows [ 0:00 0.0 ] with the timer on the left and the weight on the right in grams.
- The LED display shows [ 0:00 0.000 ] with the timer on the left and the weight on the right in ounces.
- The timer displays from [ 0:00 ] to [ 9:59 ] and then stops.

### Mode Description


- The timer starts when the flow of espresso is detected.
- When the espresso flow stops, the timer stops.

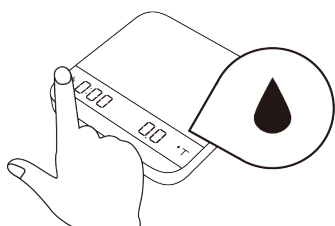


**1** The droplet icon indicates that you are in Timer Starts With Flow Mode.

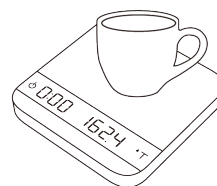

**2** Placing a container on the scale will display its weight.

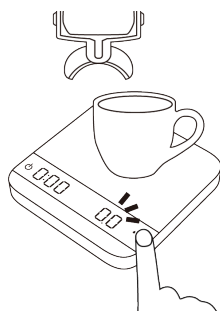

**3** Tare the weight manually.

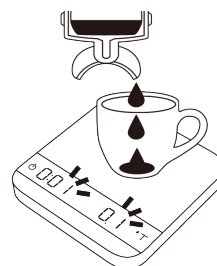


**4** The timer starts when the flow of espresso is detected.

Action	Operation
<b>Start/Stop/Reset Timer</b>	The timer will start when flow is detected
<b>Tare Weight</b>	Tap Tare button
<b>Reset Mode</b>	Double tap Tare button
<b>Stop Timer</b>	The timer will stop when flow is no longer detected
<b>Switch Mode</b>	Press and hold Power button



## Mode 4 - Auto-Tare Timer Starts with Flow Mode ( ) - Droplet and Square

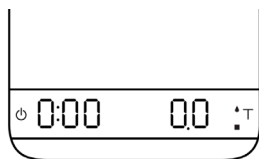


This mode is designed for baristas who would like to measure the time of the shot starting from the first few drops of espresso. When a stable weight is detected, the scale will perform the auto-tare operation. After the scale detects the espresso flow, the timer starts. The timer will stop when the espresso flow stops.

### Display


- The LED display shows [ 0:00 0.0 ] with the timer on the left and the weight on the right in grams.
- The LED display shows [ 0:00 0.000 ] with the timer on the left and the weight on the right in ounces.
- The timer displays from [ 0:00 ] to [ 9:59 ] and then stops.

### Mode Description


- The auto-tare function operates when a stable weight is placed on the scale.
- The timer will start automatically when the flow of espresso is detected.

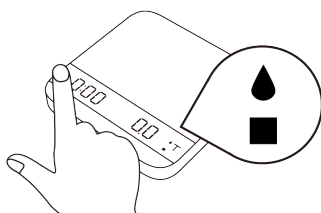

- 1 This mode is designed to measure the time of the shot starting from the first few drops of espresso.

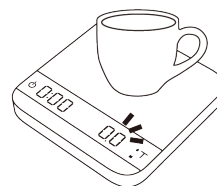

- 2 Place a stable weight on the scale.

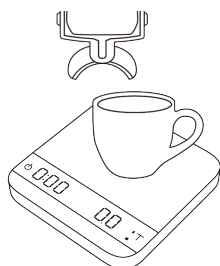


- 3 The scale will perform the auto-tare function.



- 4 When the scale detects the espresso flow, the timer will start.

Action	Operation
<b>Start/Stop/Reset Timer</b>	The timer will start when flow is detected
<b>Tare Weight</b>	Tare function operates when the weight exceeds 2 grams
<b>Reset Mode</b>	Double tap Tare button
<b>Stop Timer</b>	The timer will stop when flow is no longer detected
<b>Switch Mode</b>	Press and hold Power button

## Mode 5 - Auto-Tare Auto-Start Timer Mode ( ▲■ ) - Triangle and Square

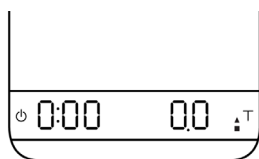


This mode is for baristas to measure the total time of a shot including the pre-infusion time. After a stable weight such as a cup is placed on the weighing pan, the scale performs auto-tare and starts the timer.

### Display


- The LED display shows [ 0:00 0.0 ] with the timer on the left and the weight on the right in grams.
- The LED display shows [ 0:00 0.000 ] with the timer on the left and the weight on the right in ounces.
- The timer displays from [ 0:00 ] to [ 9:59 ] and then stops.

### Mode Description


- The scale performs auto-tare once a stable weight is detected, then the timer starts.
- The timer stops when the espresso flow stops.

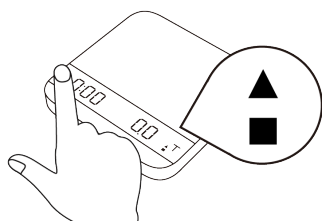


- 1 This mode is for baristas who would like to measure the total time of a shot, including pre-infusion time.

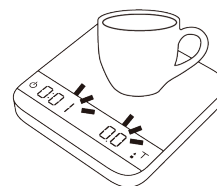

- 2 After a stable weight such as a cup is placed on the weighing pan, the scale performs auto-tare and starts the timer.

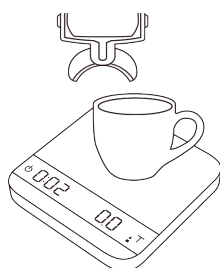


- 3 Measure the total time of a shot including the pre-infusion time.

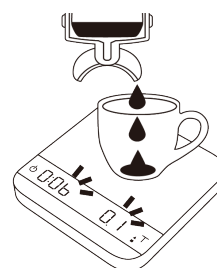

- 4 When the espresso flow stops the timer stops.

Action	Operation
<b>Start/Stop/Reset Timer</b>	The timer will start when a stable weight is placed on the scale
<b>Tare Weight</b>	Tare function starts when a stable weight is placed on the scale
<b>Reset Mode</b>	Double tap Tare button
<b>Stop Timer</b>	The timer will stop when flow is no longer detected
<b>Switch Mode</b>	Press and hold Power button

## Mode 6 - Auto-Tare Mode (■) - Square

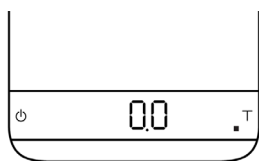

In this mode, the scale will only perform auto-tare without automatically starting the timer. Put the cup on the scale and auto-tare will be performed. Pull the shot of espresso as usual. When the cup is removed from the scale, the display flashes the final beverage weight and also shows


the tare weight of the cup. The weight resets after 30 seconds (to change this reset time, see the Configuration section to edit the [ Auto\_rES ] setting).

### Display


- The LED display shows [ 0.0 ] with the weight in grams.
- The LED display shows [ 0.000 ] with the weight in ounces.

### Mode Description


- The scale performs auto-tare once a stable weight is detected.
- The weight resets after 30 seconds.

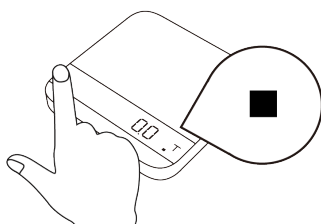


- 1 In this mode the scale will only perform auto-tare without automatically starting the timer.

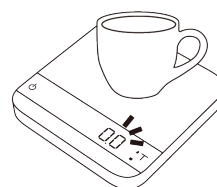

- 2 Place a stable weight on the scale.

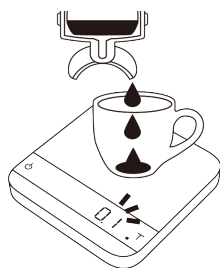

- 3 Put the cup on the scale and auto-tare will be performed.

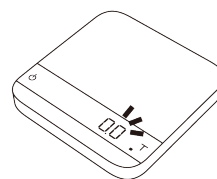


- 4 The weight resets after 30 seconds.

Action	Operation
Tare Weight	Tare function is performed when a stable weight is placed on the scale
Reset Mode	Double tap Tare button

**Note:**


1. In all three Auto-Start Modes (Timer Starts With Flow Mode, Auto-Tare Timer Starts With Flow Mode and Auto-Tare Auto-Start Timer Mode), the timer will stop when the espresso flow stops.

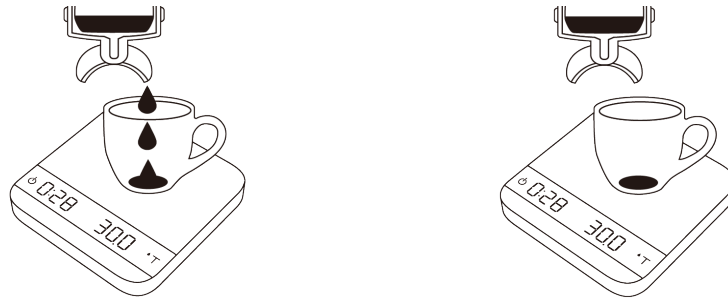

2. In all Auto-Start Modes, if the scale remains idle for 30 seconds, it will reset timer and perform tare operation.



3. In all Auto-Start Modes, the timer will stop when a negative weight (i.e., removal of cup) is detected.

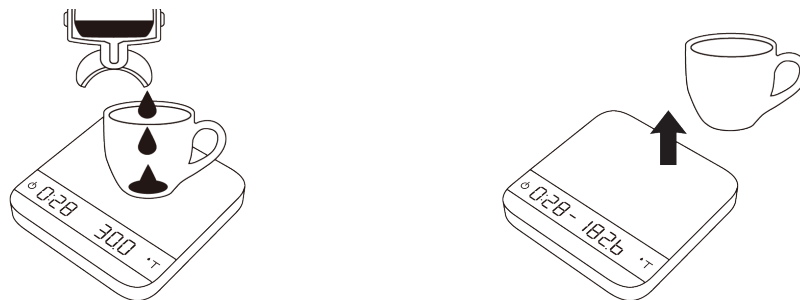

4. The scale will also display a previous stable weight that captures the coffee weight of the shot when you unload the cup.









# Configuration

## Enter Settings

1. With the Lunar powered off, press and hold the Power button. When the LED display shows [ ACAIA ] and then changes to [ SEt ], release the Power button.
2. Tap T button to enter Settings. The first setting is [ SLEEP ].
3. Please refer to the following table for key operations

Action	Operation
Next Setting	Tap Tare button
Enter Setting	Press and hold Tare button
Toggle Options	Tap Tare button
Save Option	Press and hold Tare button
Back to Menu Without Saving	Tap Power button
Exit Settings and Return to Modes	Tap Power button

## Settings Menu

Setting	Display	Sub-Menu Options	Default
Sleep Timer	SLEEP	5, 10 ,20, 30, 60, Off	5
Zero Tracking	trAcE	0.5 d, 1 d, 2 d, 3 d, Off	1 d
Key Sound	bEEP	On, Off	On
Zero Range	O.rAnGE	2, 100	100
Weighing Filter	Filt	2, 4, 6, 8, 16, 32, 64, 128	16
Default Weighing Unit	Unit	Gram, Ounce	Gram
Weighing Resolution Setting	rESoL	hiGh, dEFAULT	dEFAULT
Weighing Mode	Node_1	On, Off	On
Dual Display Mode	Node_2	On, Off	On
Timer Starts with Flow Mode 	Node_3	On, Off	On
Auto-Tare Timer Starts with Flow Mode  	Node_4	On, Off	On
Auto-Tare Auto-Start Timer Mode  	Node_5	On, Off	On
Auto-Tare Mode 	Node_6	On, Off	On
Bluetooth On/Off	bt_SEt	On, Off	On
Battery Saving	bAttSvE	30, 90, 180, Off	90
Pre-infusion Timeout	PrE_inFu	10, 30, 60, 120	60
Auto-Start Sensitivity	SEnSE	0.1 g, 0.2 g, Off	Off
Auto-Reset	Auto_rES	Off, 10, 30	30
Reset to Default	rESet.d	No, Yes	No

## Sleep Timer Setting [ SLEEP ]

1. Sleep Timer settings can also be configured in the Acaia apps.
2. The number indicates the amount of time before the scale automatically powers off. For example, when 10 is selected, the scale powers off after 10 minutes of being idle if the scale is disconnected from all mobile devices.

## Zero Tracking Setting [ trAcE ]

1. Zero Tracking is a function for automatically maintaining the zero indication within certain limits.
2. Off: It is not recommended to turn off Zero Tracking because the zero indication can drift easily as the room temperature changes.
3. 0.5 d~3 d: For example, for standard resolution each division is 0.1 g, 3 d = 0.3 g. When Zero Tracking is set to be 3 d, any initial weight between  $\pm 0.3$  g on the weighing pan will be zeroed out gradually.
4. 2 d is recommended in general for the Acaia Lunar.

## Key Sound Setting [ bEEP ]

1. Key Sound settings can also be configured in the Acaia apps.
2. Set the Key Sound function to on/off to enable/disable the beeping sound.

## Zero Range Setting [ 0.rAnGE ]

1. The Zero Range setting determines the range for which the tare button executes zero operation instead of tare operation.
2. When Zero Range is set to 2, the range for zero-setting will be 2% of the capacity, i.e.,  $\pm 40$  g for Acaia Lunar. By pressing the tare button, any weight within  $\pm 40$  g is zeroed out by zero operation while any weight that lies outside the range is tared out by tare operation.
3. If Zero Range is set to 100, the range for zero-setting will be 100% of the capacity, i.e.,  $\pm 2$  kg for Acaia Lunar. Therefore, instead of tare operation, zero operation would be executed in this setting whenever tare button is pressed.

Notice: The difference between zero operation and tare operation is that zero operation would simply ignore the weight and display as 0 while tare operation would deduct the weight from the weighing result. However, zero operation does not increase the scale capacity.

## Weighing Filter Setting [ Filt ]

1. The Weighing Filter Setting determines the speed at which the load receptor responds to weight and determines the weighing value. The larger the number, the more stable but slower the weighing result will be. The number shown on the LED display indicates the current filter setting.
2. Press tare button to change the parameter.

## Default Unit Setting [ Unit ]

1. The Default Weighing Unit is set to grams if [ 9 ] is selected and ounce if [ o2 ] is selected.

## Weighing Resolution Setting [ rESoL ]

1. The default Weighing Resolution is set to [ dEFAUL ]: the division is 0.1 g/0.002 oz.
  2. Tap tare button to switch the Weighing Resolution between [ dEFAUL ] and [ hiGh ].
  3. When the Weighing Resolution is set to high, division will be 0.01 g/0.0005 oz. The default display will show [ 0.00 ] when the scale is set to grams, and [ 0.0000 ] for ounces in Weighing Mode.
- Note: After setting Weighing Resolution to high, the default display will show [ 0:00 0.00 ] with timer in Dual Display Mode and Auto Start Modes.

## **Weighing Only Mode Setting [ NoDE\_1 ]**

1. The default setting is On.
  - On: Mode enabled.
  - Off: Mode disabled.

## **Dual Display Mode Setting [ NodE\_2 ]**

1. The default setting is On.
  - On: Mode enabled.
  - Off: Mode disabled.

## **Timer Starts with Flow Mode Setting [ NodE\_3 ]**

- The default setting is On.
- On: Mode enabled.
  - Off: Mode disabled.

## **Auto-Tare Timer Starts with Flow Mode Setting [ NodE\_4 ]**

- The default setting is On.
- On: Mode enabled.
  - Off: Mode disabled.

## **Auto-Tare Auto-Start Timer Mode Setting [ NodE\_5 ]**

- The default setting is On.
- On: Mode enabled.
  - Off: Mode disabled.

## **Auto-Tare Mode Setting [ NodE\_6 ]**

- The default setting is On.
- On: Mode enabled.
  - Off: Mode disabled.



## **Bluetooth Setup Setting [ bt\_SEt ]**

1. Off: Bluetooth disabled. The scale does not allow any Bluetooth connection.
2. On: Bluetooth enabled. The scale allows Bluetooth connection. The user may connect the scale with Acaia apps.



## **Battery Saving [ bAttSAvE ]**

1. Save up to 20% of your battery by dimming the display after some time. It will return to its original brightness when the scale detects objects on it.
2. The number indicates the amount of time in seconds before the scale enters battery saving mode.
3. Tap the tare button to toggle through the options.

## **Pre-Infusion Time Out [ PrE\_inFu ]**

1. Determines when the scale times out in Auto-Start (  ) mode and two Auto-Start (  ) modes when the timer is manually started. This is most useful for long pre-infusion times and resolves the timeout that sometimes happens for slower pre-infusions.
2. The number indicates the time in seconds it will take for the scale to reset if no espresso flow or weight is detected.

## **Auto-Start Sensitivity [ SEnSE ]**

1. Minimum weight is decreased for more sensitivity. This is ideal for slower espresso shots in the  modes. Stability depends on environmental noise. The previous firmware started the timer at ~0.6 g into an espresso shot.
2. The number indicates the sensitivity of flow detection in the  modes. Smaller value indicates higher sensitivity, but is recommended only for stable working environments.

## **Auto-Reset [ Auto\_rES ]**

1. After a cup is removed, the timer will automatically reset. This setting gives you options on how long to wait for the reset. It enables the user to pull successive shots of espresso quickly in the three Auto-Start modes.
2. The number indicates the timeout value in seconds of timer reset after a cup is removed.


## **Reset to Default Setting [ rESet.d ]**

1. Select [ YES ] to reset all settings to default value.
2. Press and hold tare button for 1 second until [ SLEEP ] is shown on the LED to reset all settings to default.





# Appendix

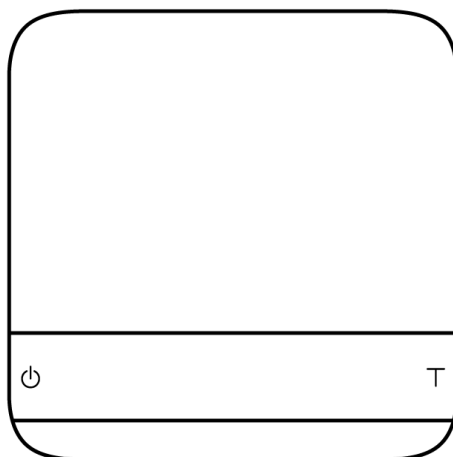
---



## Buttons

	Function	Example
 <b>Power Button</b>	Turn on	Press and hold for 0.5 seconds to turn on the scale.
	Turn off	Double-tap to turn off the scale.
	Switch mode	While the scale is turned on, press and hold for one second to switch modes.
	Start/stop/reset timer	Tap to start/stop/reset timer.
	Back	While in Settings Menu, tap to go back to Modes.
 <b>Tare Button</b>	Tare	Tap to perform tare operation.
	Tare and reset timer	While in Auto-Start Modes, double tap to zero weight and reset timer.
	Switch option	While in Settings, tap to advance through sub-menus. While in sub-menus, tap to toggle options.
	Confirm	While in Settings, press and hold for two seconds to confirm the option selected in a sub-menu.
	Enter Calibration Mode	While in Weighing Mode, rapidly tap to enter Calibration Mode.

## LED Indicators

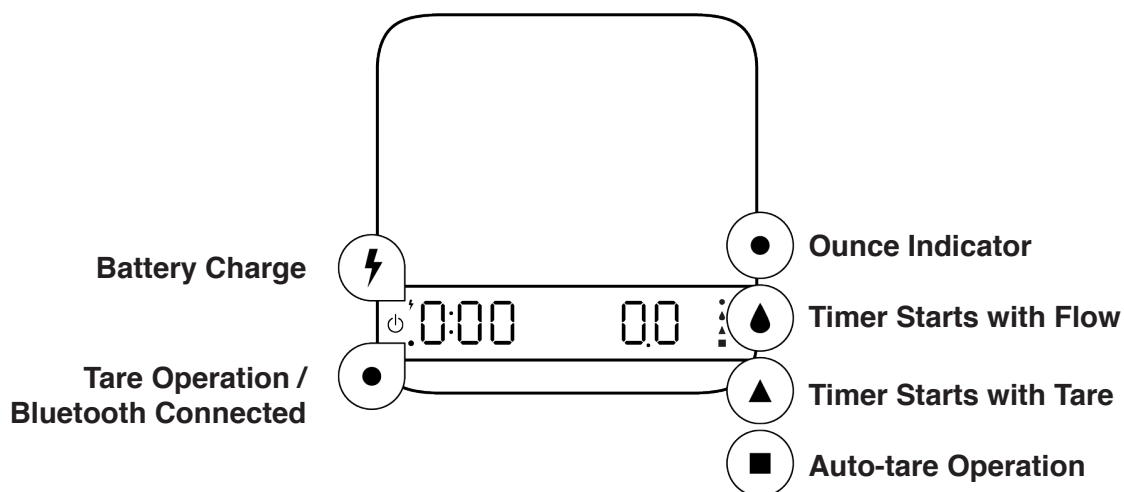

### Battery Charge/Charge Error

The orange indicator on the upper left turns on when the battery is charging and turns off when the battery is fully charged. The indicator starts flashing or does not appear when the USB cable malfunctions.

### Tare Operation/Bluetooth Connected

The orange indicator on the lower left turns on when the Tare button is pressed.

### Ounce Indicator

The orange indicator on the upper right turns on when the weighing unit is in ounces.

### Timer Starts with Flow ( 🍷 )

When the scale detects the flow of espresso, the timer starts. The timer will stop when the flow stops.

\*Please note: The flow detection mode is designed to detect the flow of espresso. The timer may not trigger when attempting to pour from a kettle.



### Timer Starts with Tare ( ▲ )

The scale performs auto-tare and simultaneously starts the timer when a stable weight is placed on the weighing pan.

### Auto-Tare Operation ( ■ )

The scale performs auto-tare when a stable weight is placed on the weighing pan.

## Error Codes

Error Code	Description
<b>100</b>	Access Code Error, unrecognized access code.
<b>101</b>	EEPROM error, unable to access memory. Please contact Acaia support.
<b>102</b>	AD error, unable to access weighing signal. Please contact Acaia support.
<b>303</b>	Unable to find acceptable starting Zero point, most likely due to loadcell damage caused by excessive force or drop. Please contact Acaia support.
	Over load: the weight is over the maximum capacity.
	Under load: the weight is under the minimum capacity.
<b>304</b>	Calibration error. Calibration cannot proceed when environmental noises are too strong. Please calibrate in a stable environment free of wind, vibration, etc.
<b>904</b>	Password error (the default password is 0000).
<b>_H2O</b>	Water in the power button.
<b>H2O_</b>	Water in the tare button.
<b>_H2O_</b>	Water in the power button and tare button.

## Other

Display Code	Description
<b>UPdAtE</b>	The scale is in update mode. <b>Note: If you want to leave update mode, please connect the scale's USB to a power source.</b>

# Specifications

---

<b>Model</b>	AL001 / AL006 / AL007
<b>Product Weight</b>	265 g ± 5 g
<b>Product Dimensions</b>	W: 105 mm L: 105 mm H: 15 mm
<b>Maximum Capacity</b>	2000 g / 70.55 oz
<b>Minimum Weight</b>	0.1 g
<b>Measuring Units</b>	gram, ounce
<b>Readability</b>	0.1 g
<b>Repeatability</b>	0.1 g
<b>Linearity</b>	1 d (d = 0.1 g)
<b>Indication Limit</b>	2060 g / 72.66 oz
<b>Power Supply</b>	5 V / 500 mA
<b>Battery</b>	Lithium-ion rechargeable 3.7 V 1100 mAh
<b>Battery Life</b>	Up to 27 hours
<b>Display</b>	8-digit LED
<b>Material</b>	Aluminum, Acrylic
<b>Surface</b>	Anodized aluminum coating (Black / Silver) Hydrophobic ceramic coating (White)
<b>Connectivity</b>	Bluetooth 4.0
<b>Warranty</b>	2 Years
<b>Inside the Package</b>	Acaia Lunar Coffee Scale x 1 Heat Resistant Pad x 1 Micro USB Charging Cable x 1 Acaia Calibration Weight 100 g x 1

## **Copyright**

**This user manual is protected by copyright. All rights reserved. No part of this manual may be reproduced, processed, duplicated or published in any form by photocopying, microfilming, reprinting or any other method, in particular electronic means, without the written consent of Acaia.**

**© Acaia, California, 2022.**